

Tools, Tips, and Workflows

Display Boundaries



Lewis Graham
July 2012
Revision 1.0

Does your screen become cluttered while working with multiple blocks of LIDAR data within LP360? Use the *Display Boundaries* tool button located on the main LP360 toolbar to turn on/off the boundaries that represent the header extents of each LAS file.

